




DeltaNiche

Fixing Instructions

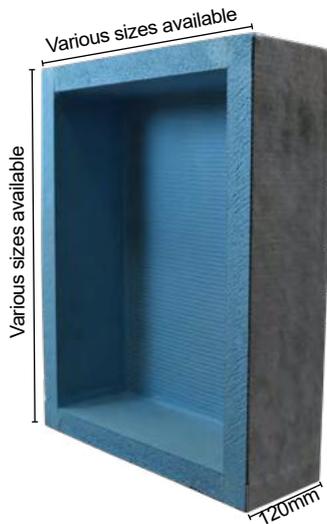


Preformed Wall Niches are 120mm deep and can be cut to suit the depth of the wall.



Place the Wall Niche in position. Check the wall niche is level, and fix timber battens to secure the Wall Niche in place.



The surrounding wall should be covered using a suitable insulating tilebacker board, fixed securely in accordance with the manufacturers instructions.

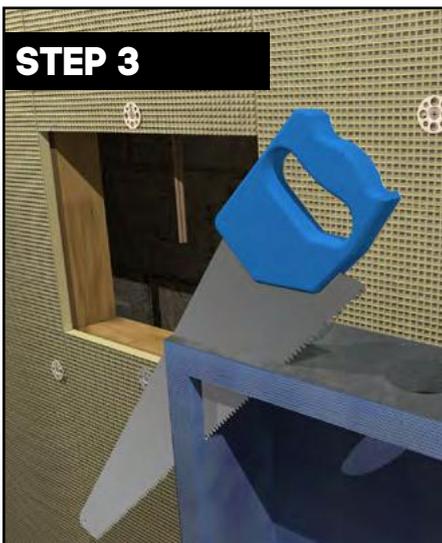

Once all the boards are securely fastened, if necessary, mark the wall niche to identify the depth of cut required.

Using a hand saw, cut the excess off the Wall Niche. Once trimmed, sand down the edges to a smooth finish ready for fitting & waterproofing.

NOTE: The Wall Niche should sit completely flush to the boards, once inserted into the wall.



Place the Wall Niche into the wall, checking it is level with the surrounding board. Once level, securely fasten with washers and screws.



Once the Wall Niche is fitted, it is essential that a suitable waterproofing system is applied over all joints and abutments. Ensure the Wall Niche is fully waterproof before tiles are applied.

It is important that all joints, abutments and fixings to the surrounding tile backer boards are also waterproofed.

Building Regulations

All information is given as guidance and if adhered to will perform as intended. We fully guarantee the quality of our products, however, as we do not have knowledge of site conditions or the capability of the installer, we cannot accept liability for damage which may arise due to a result of incorrect installation. The information and advice provided by PCS does not override nor supersede building regulations. It is the responsibility of the user to seek professional guidance to ensure PCS products are compatible for their intended use and that the products comply with building regulations.

Please contact head office for more info:

T: +44 (0) 1942 820131 F: +44 (0) 1942 246 706

REV. 07

www.pcsboard.com