


DeltaWedge


Fixing Instructions



DeltaWedge are insulated waterproof construction panels manufactured with a gradient to one surface. DeltaWedge is ideally suited for projects where falls to floor need to be created over existing level floors in environments such as wetrooms, balconies, roof terraces etc.



G0305

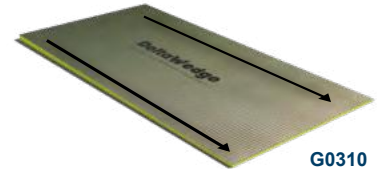


G0310


A tough surface coating provides the perfect surface for the application of tiles. Creating accurate falls over long distances is easily achieved by using DeltaBoard as a raising course.

Ideal for balconies and roof terraces, DeltaWedge are lightweight and easy to install ensuring required falls are achieved and maintained. Using DeltaWedge to create falls to floors provides quick installation time. Floors created with DeltaWedge can be usually tiled within 4 hours after fixing.


Arrows indicate fall to drain

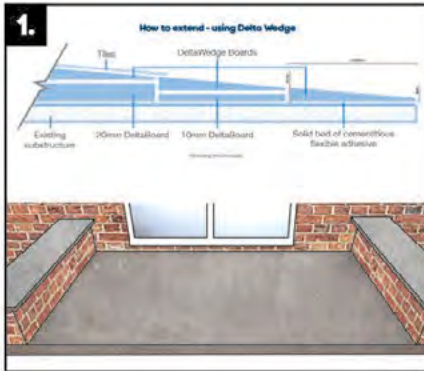


1. DeltaWedge are used in conjunction with DeltaBoards which are used to raise the wedge boards maintaining falls over any distance. It will be necessary to pre-plan the setting out of the floor as you may require different thicknesses of boards for the raising course.

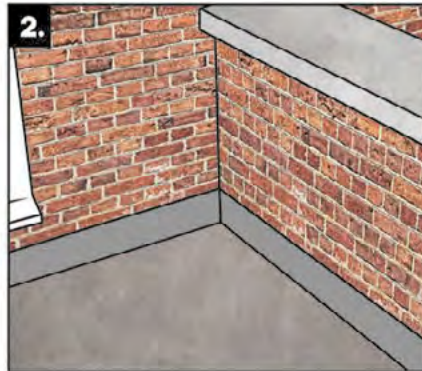


2. Prepare the existing floor ensuring all traces of grease and dust are removed. Place 5mm expansion strip to the perimeter to ensure an expansion joint is maintained between the DeltaWedge and the wall. This joint will be sealed at a later stage with a suitable sealant.

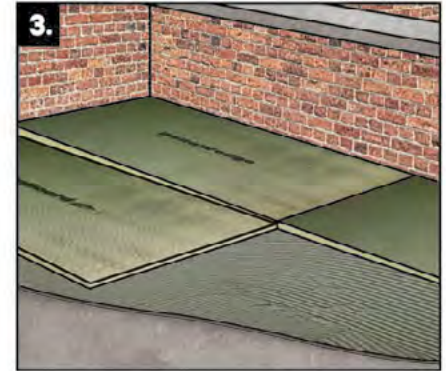

3. Prime floor using a suitable exterior grade primer. Fix boards using an exterior grade flexible cement based tile adhesive applied with a large notched trowel to form a level base. Boards must be pressed firmly into adhesive whilst the adhesive is still tacky. Use a straight edge to ensure falls are maintained.

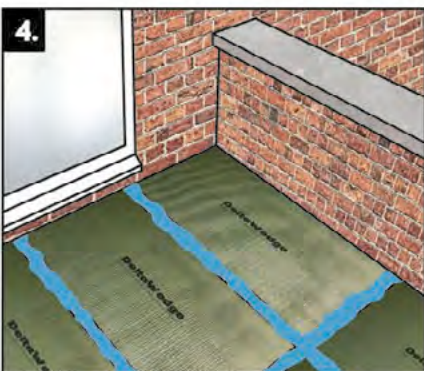

4. When all boards have been firmly placed and fixed, the joints can then be taped using a waterproofing system. The material used for taping and sealing joints should be suitable for exterior applications.

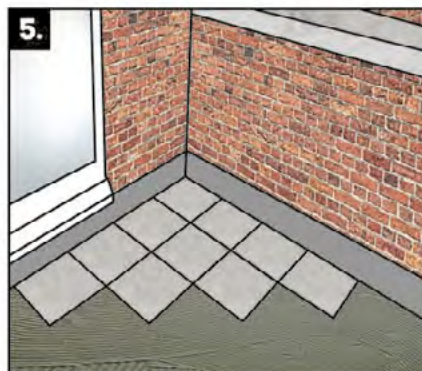

5. Once the boards are securely fixed and the adhesive sufficiently cured tiling can begin. Fix tiles using a suitable exterior grade cement based flexible adhesive. Finish with a suitable exterior grade flexible grout. Avoid grouting the external perimeter as this should be sealed using a suitable sealant later.



6. Seal the perimeter with a suitable exterior grade sealant before fixing tile skirts.